

OPEN ALL™ ELECTRONIC CAN OPENER

User Guide

LJ-CA2800



Contents

Safety Precautions	1
Safety Precautions for your Open All	1
Features of your Open All	2
Using your Sunbeam Open All	4
Care and Cleaning of your Open All	6

Safety Precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM OPEN ALL.

- Keep fingers well away from blade when in use.
- Use extreme care when handling blades.
- Do not place any part of this appliance in a dishwasher.
- Use extreme care when handling off-cuts.
- Switch off the appliance and disconnect from supply before changing accessories or approaching part that move in use

Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote-control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farmhouses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

Features of your Open All

Release Button

Cutting Assembly

Support Bar

 
Drive Wheel

Knife Sharpener

Built in ceramic knife sharpener will ensure that your knives remain sharp at all times.

Cord Storage

Handy cord storage keeps the benchtop tidy by storing unwanted cord.

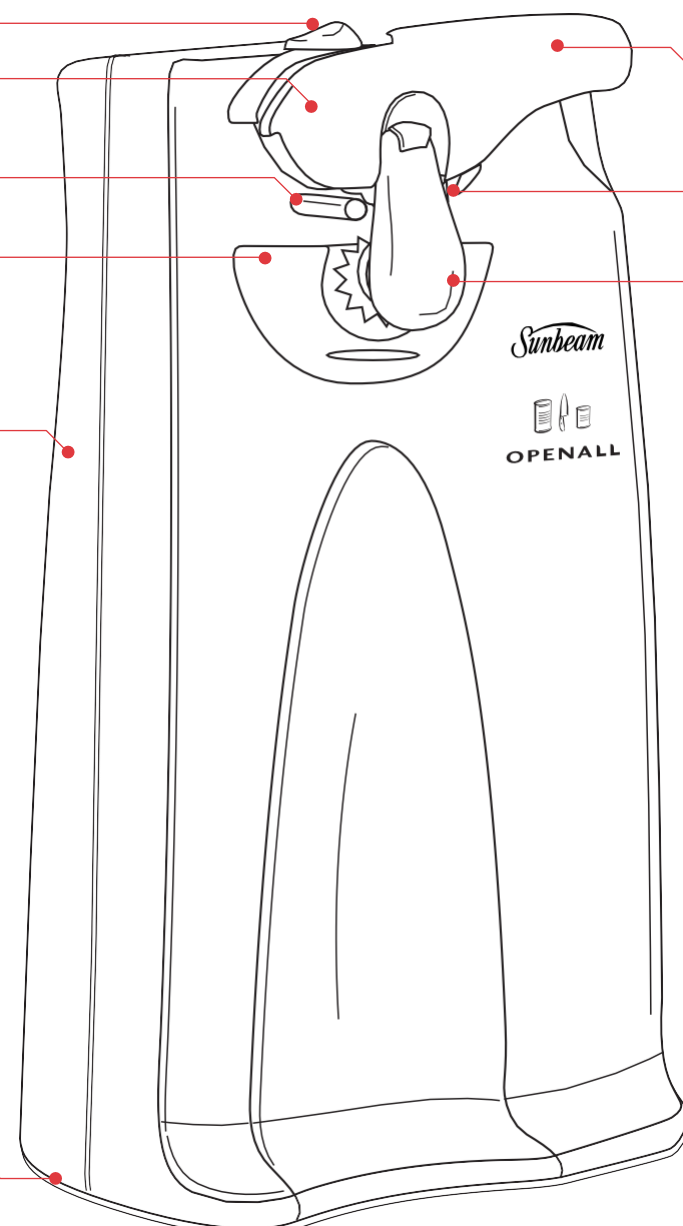

Lever

Blade

Magnetic Lid Holder

Stainless steel blade cutting action

Stainless steel blade allows for a smoother cutting action.

Magnetic lid holder

Holds the lid in place during and after the can is fully opened.

Removable lever

 
For easy cleaning, slide the release button and remove the cutting assembly/lever.

Automatic operation

Simply lift the lever and position the blade inside the rim of the can. Press the lever down and the Open All™ can opener will automatically stop when the can is fully opened.


Using your Sunbeam Open All

1. Ensure that the Cutting Assembly is correctly positioned. (See figure 1.)

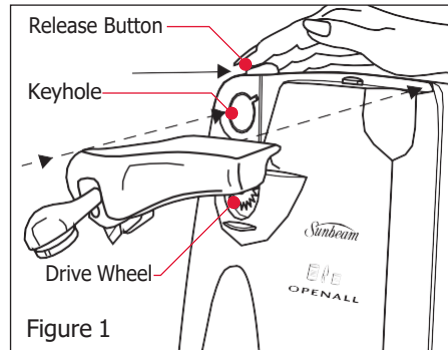


The Cutting Assembly fits into the keyhole opening at the top of the Open All™ can opener, above the Drive Wheel. Slide the Release Button to the right as the Cutting Assembly is inserted, it will “click” into position, with the release button returning to its original position.

 2. Insert the plug into a 230–240-volt poweroutlet and turn the power on.
3. Hold the Lever in the upright position. Position the can under the Support Bar so that the rim of the can rests on top of the Drive Wheel, tilting the can at a slight angle towards the main body of the unit. (See figure 2.)

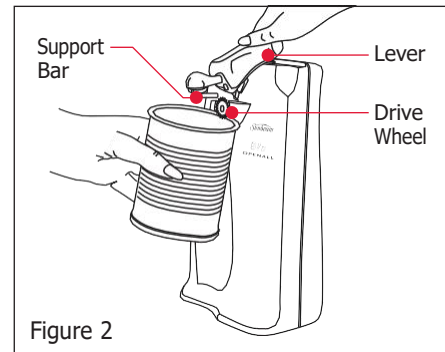


 4. Firmly press the Lever down. This action will bring the blade down and pierce the lid of the can and start operating the motor to turn the can. Ensure the Magnetic Lid Holder is in contact with the lid of the can. (See figure 3.)

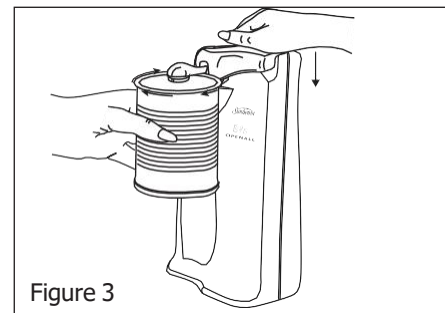

5. When the can begins to turn, it is no longer necessary to hold down the Lever.
6. When the can is fully opened, the Open All™ can opener will stop automatically.

 7. To remove the can, support the can with one hand and lift the Lever with the other. The lid will remain attached to the Magnetic Lid Holder. (See figure 4.)

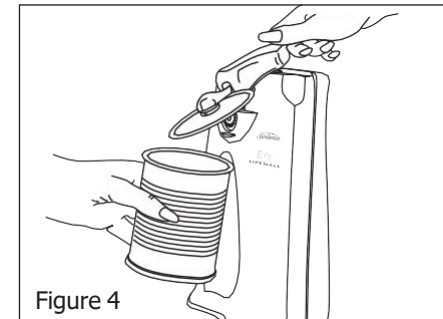

CAUTION: Be careful when removing the lid from the magnet as the cut edge is sharp.

Opening dented/damaged cans:

Occasionally, badly dented cans will cause the Open All™ can opener to stall. If this happens, grasp the dented can and guide it through the cutting action manually until the damaged areas are opened.

Jammed cans: To continue opening a can that has become jammed, raise the Lever and release the can. Begin the cutting action again in a new position on the can lip.

Sharpening knives: Support the Open All™ can opener on top with one hand. With the other guide the knife through the unique ceramic block at the back of the Open All™ can opener. Repeat this action until you are satisfied with the sharpness of your knife.

Care and Cleaning

Turn the power off and unplug the cord from the power outlet before cleaning. The Cutting Assembly is easily removed for thorough cleaning. (See figure 5.)

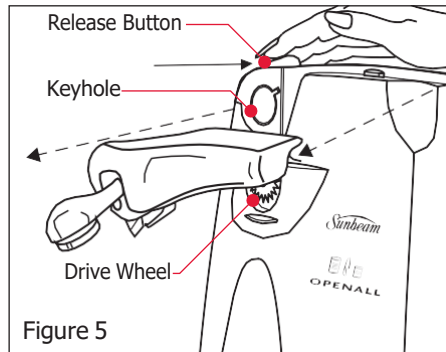 


Figure 5

Removing the Cutting Assembly:

Raise the Cutting Assembly to its most upright position. Slide the Release Button to the right and slide out the Cutting Assembly. To replace the Lever hold it vertically with the Release Button slid to the right, gently slide it into the Keyhole and rotate clockwise. (See figure 5.)

Drive Wheel:

Wipe with a damp cloth to thoroughly clean, use a small brush to remove accumulated dirt.

Motor Housing:

Wipe over with a damp cloth.

Do not use harsh abrasives or cleaners to clean any parts of your Open All™ can opener, as these may scratch the parts.

Do not wash any parts in an automatic dishwasher, as the hot water temperatures and harsh detergents may ultimately warp and scratch these parts.

Warning: NEVER IMMERSE THE OPEN ALL IN WATER OR ANY OTHER LIQUID.

Notes

